



PID 11082

Closed Loop Control on a 16F PICmicro



Class Objective

When you finish this class you will:



- Define the standard Feedback Loop and the "Big Picture" of controls
- Describe the steps needed to produce and analyze a simple system transfer function model
- Explain a PID controller's ability to stabilize or enhance a systems performance
- Label the components of the Signal Chain Block Diagram for a controlled feedback system
- Describe each block of code needed for a PID controller in a 16F PICmicro



Agenda

Introduction
Modeling
Feedback Control
PID Implementation

- Introduction to Control Systems
- Modeling
 - Examples
- Feedback Control Systems
 - Examples
- PID Implementation
 - LAB




Introduction



What is a Control System?


→ Introduction
Modeling
Feedback Control
PID Implementation

- A **control system** is an arrangement of physical components connected or related in such a manner as to command, direct, or regulate itself or another system

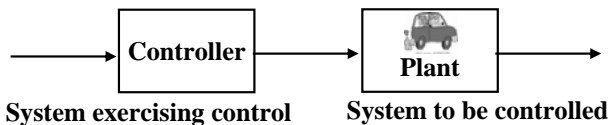

Open vs Closed Loop

- Open Loop Control
 - Control action independent of output
 - Lots of a priori info about plant behavior needed
 - Accuracy depends on calibration
 - Suffers from noise and uncertainty



Open vs Closed Loop

- Closed Loop Control
 - Requires Feedback from system output
 - Control action depends on the error $e=r-y$
 - We use feedback to predictably enhance/shape performance or alter undesirable properties in the presence of uncertainty and disturbances
 - Increase accuracy, Decrease sensitivity
 - Instability can be an issue



Why do we need models?

- Mathematical models are needed for quantitative relationships
- Mathematical models are essential for
 - Designing high performance control systems
 - Conceptualization
 - Simulation/Analysis
 - Prototyping
 - Validation
 - Deployment

Modeling

Modeling

→ Introduction
Modeling
Feedback Control
PID Implementation


Time Domain Schematic	Frequency Domain
$\sum F(t) = m \cdot a(t)$	
$V(t) \rightarrow \text{Dynamic Equation } \dot{y}(t) + y(t) = u(t) \rightarrow \dot{\theta}(t)$	$s \cdot Y(s) + Y(s) = U(s)$
	$\text{Transfer Function } P(s) = \frac{1}{s+1}$
<p>Analysis</p> <p>Step Response</p>	<p>Analysis</p> <p>pole-zero Frequency Response</p>

Schematic & Dynamic Equation

- Schematic
 - Identify system to be controlled
 - Form Free body diagram
 - Label inputs and outputs
- Dynamic equation
 - Write the equation of the free body diagram from fundamental principles

Schematic & Dynamic Equation

Example Free body diagram:

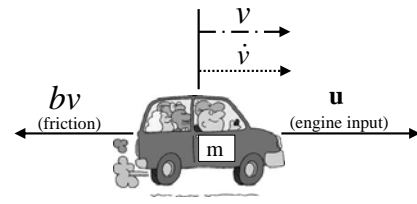


Dynamic Equation: Newton's Law: $F = ma$

$$m\dot{v}(t) = u(t) - bv(t)$$

$$y(t) = v(t)$$

Laplace Transforms

- Used to analyze linear systems
 - Reduces mathematical complexity
 - New Frequency Domain point of view

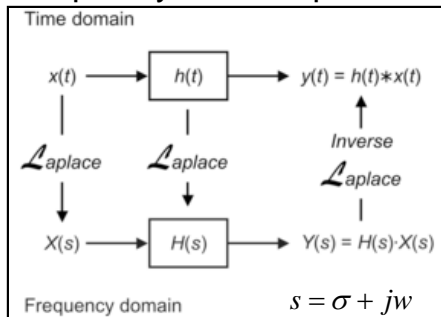

Laplace Transforms

$$F(s) = \mathcal{L}\{f(t)\} = \int_{0^-}^{\infty} e^{-st} f(t) dt$$

- Common Transform pairs:

$$1 \leftrightarrow \frac{1}{s}$$

$$e^{at} \leftrightarrow \frac{1}{s-a}$$

$$\cos \omega t \leftrightarrow \frac{s}{s^2 + \omega^2} = \frac{1/2}{s-j\omega} + \frac{1/2}{s+j\omega}$$

$$\sin \omega t \leftrightarrow \frac{\omega}{s^2 + \omega^2} = \frac{1/2j}{s-j\omega} - \frac{1/2j}{s+j\omega}$$

Laplace Transforms

- Common Transform properties

Linearity $af(t) + bg(t) \Leftrightarrow aF(s) + bG(s)$

Differentiation $f'(t) \Leftrightarrow sF(s) - f(0^-)$

Integration $\int_0^t f(t)dt \Leftrightarrow \frac{1}{s} F(s)$

Laplace Transforms

- Car example

- Remember: $f'(t) \Leftrightarrow sF(s) - f(0^-)$




$$m\dot{v}(t) = u(t) - bv(t) \quad \Rightarrow \quad msV(s) = U(s) - bV(s)$$

$$y(t) = v(t) \quad \Rightarrow \quad Y(s) = V(s)$$

The Transfer Function

- The Transfer Function is the linear mapping of the input, $U(s)$, to the output $Y(s)$

$$P(s) = \frac{Y(s)}{U(s)}$$




The Transfer Function

- Ratio of Output over Input for car example

$$msV(s) = U(s) - bV(s)$$

$$Y(s) = V(s)$$

$$\frac{Y(s)}{U(s)} = \frac{V(s)}{msV(s) + bV(s)} = \frac{1/m}{s + b/m} = P(s)$$



Pole/Zero Stability

$$P(s) = \frac{N(s)}{D(s)}$$

- Zeros are the roots of N(s)**

- Represented on the s-plane as a circle
- Transfer function's magnitude at this point is zero

$$|P(z_0)| = 0$$

Pole/Zero Stability


$$P(s) = \frac{N(s)}{D(s)}$$

- Poles are the roots of D(s)**

- Represented as an x on the s-plane
- Transfer function's magnitude at this point is infinity


$$|P(p_0)| = \infty$$

$$P(s) = \frac{1/m}{s + b/m}$$



Pole/Zero Stability

Impulse Responses:

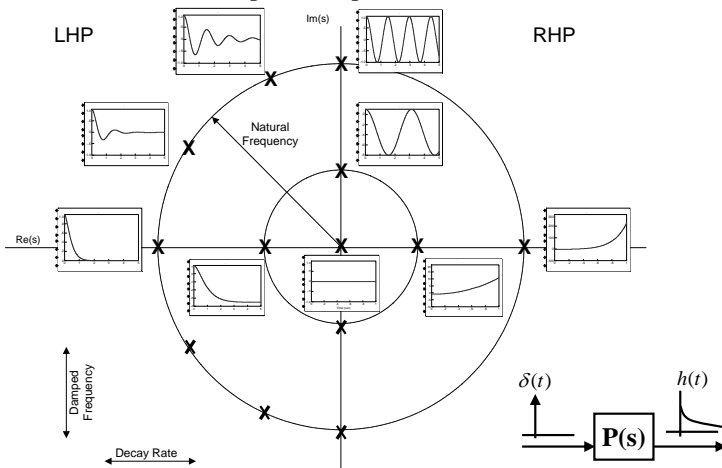


Frequency Response

- Set s=jw, P(jw)**

- Calculate Magnitude Response $|P(jw)|$
- And Phase Response Angle($P(jw)$)

$$P(jw) = \frac{1/m}{jw + b/m}$$

$$|P(jw)| = \frac{1/m}{\sqrt{w^2 + (b/m)^2}}$$

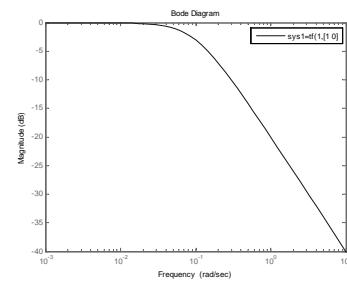


Step Response

- The response of the system to a unit step input**

$$U(s) = 1/s \rightarrow \frac{1/m}{s + b/m} \rightarrow Y(s)$$


$$u(t) = 1 \text{ at } t = 0 \quad y(t) = L^{-1}\{Y(s)\} = L^{-1}\left\{\frac{1/m}{s(s + b/m)}\right\}$$

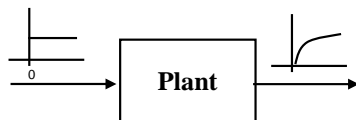

Step Response

- Step response**

$$U(s) \rightarrow \frac{1/m}{s + b/m} \rightarrow Y(s)$$

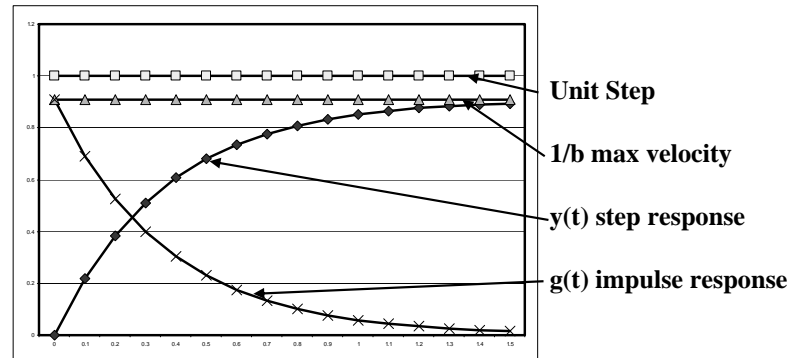

Interpreting the Car Model

- Reality Check, does it make sense?
- Is it stable? Why
- Note:
 - As friction (b) increases
 - The steady state speed or “terminal velocity” (1/b) decreases

Model Limitations



- “All models have limitations, stupidity does not.”
- A. Rodriguez

Car Simulation Lab

- Lets test this model


Motor Example

- DC Motor

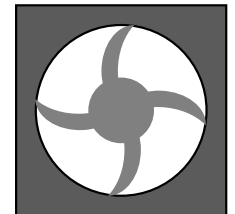

- Motor speed is proportional to voltage $V \propto K_1 \dot{\theta}$
- Motor torque is proportional to current $T \propto K_2 i$

Motor's Schematic and Dynamic Equations

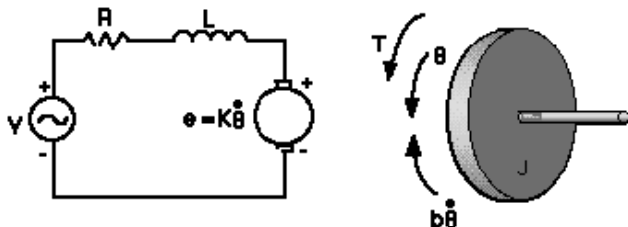


- Sum of voltages: $L \frac{di}{dt} + Ri = V - K_1 \dot{\theta}$
- Sum of torques: $J \ddot{\theta} + b \dot{\theta} = K_2 i$
- Input: V Output: $w = \dot{\theta}$

Motor's Transfer Function

- Remember: $f'(t) \Leftrightarrow sF(s) - f(0^-)$
- $$\begin{aligned} L \frac{di}{dt} + Ri = V - K_1 \dot{\theta} &\longrightarrow (Ls + R)I(s) = V - K_1 W(s) \\ J \ddot{\theta} + b \dot{\theta} = K_2 i &\longrightarrow (Js + b)W(s) = K_2 I(s) \end{aligned}$$
- Input : Volatage V
Output : Angular velocity $w = \dot{\theta}$
- Output over Input: $\frac{W}{V} = \frac{K_2}{(Js + b)(Ls + R) + K_1^2}$


Motor's Transfer Function



$$P(s) = \frac{K_2}{(Js + b)(Ls + R) + K_1^2}$$

$$K_1 = K_2 = J = 0.01$$

$$L = 0.5, R = 1, b = 0.1$$

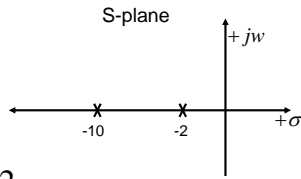


$$P(s) = \frac{2}{s^2 + 12s + 20.02} \approx \frac{2}{(s + 10)(s + 2)}$$

● Is it stable?

Analysis

● Step Response

$$P(s) = \frac{2}{(s + 10)(s + 2)}$$

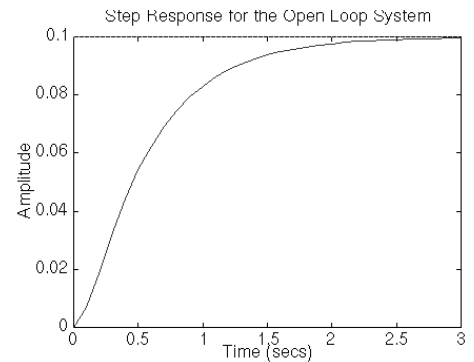

Motor Simulation Lab

● Lets test this model

Modeling

Introduction
Modeling
Feedback Control
PID Implementation

Time - Domain Schematic	S - Domain
<p>$\sum V = 0$ $\sum T = 0$</p>	
<p>Dynamic Equation</p> $L \frac{di}{dt} + Ri = V - K_1 \dot{\theta}$ $J \ddot{\theta} + b \dot{\theta} = K_2 i$	<p>Laplace Transform</p> $(Ls + R)I(s) = V - K_1 W(s)$ $(Js + b)W(s) = K_2 I(s)$ <p>Transfer Function</p> $\frac{W(s)}{V(s)} = P(s) = \frac{2}{(s + 10)(s + 2)}$
<p>Analysis</p> <p>Step Response</p>	<p>Analysis</p> <p>pole-zero</p> <p>Frequency Response</p>


Feedback Control

Feedback Control

Introduction
Modeling
Feedback Control
PID Implementation


● Feedback

- The Standard Feedback Loop
- Closed Loop



● PID

- How does each term work?
- Tuning a PID controller




● Car example



● Motor example




The Standard Feedback Loop and the "Big Picture"

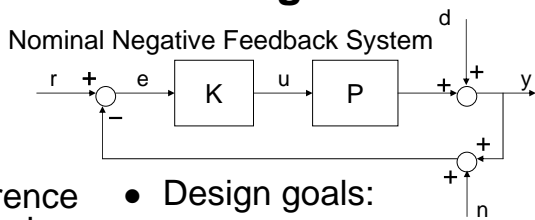

- r – reference command
 - e – error
 - u – control
 - d – disturbance
 - y – output
 - n – sensor noise
- Design goals:
 - Stable
 - Small error
 - Good command following
 - Good disturbance/noise attenuation


Closed Loop Transfer Function

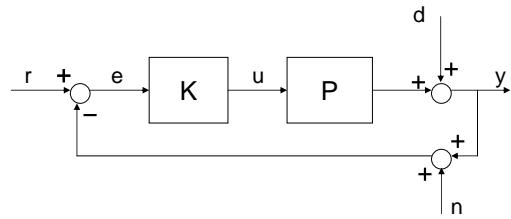

$$y = PK(r - y) = PKr - PKy$$

$$y = \frac{PKr}{1 + PK} \quad \frac{y}{r} = T_{ry} = \frac{PK}{1 + PK}$$


Closed Loop Transfer Function

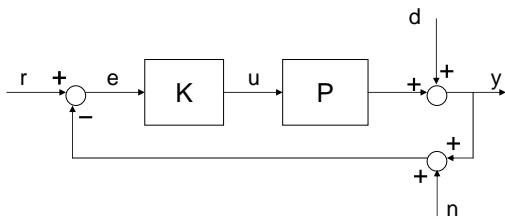

$$y = \left[\frac{PK}{1 + PK} \right] r + \left[\frac{1}{1 + PK} \right] d + \left[\frac{-PK}{1 + PK} \right] n$$

$T_{ry} \qquad T_{dy} \qquad T_{ny}$

Closed Loop Transfer Function





$$m = 1 \quad b = 1$$

$$P = \frac{1}{s + 1} \quad K = 1$$

$$T_{ry} = \frac{PK}{1 + PK} = \frac{1}{s + 2}$$

Closed Loop Transfer Function

- Same analysis tools used for the closed loop transfer function
 - Pole-zero stability
 - Step response

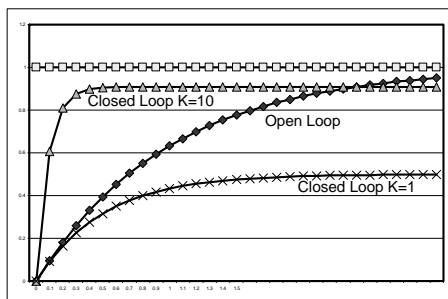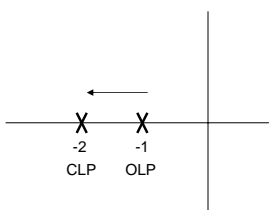

PID


- The PID (Proportional Integral Derivative) is sometimes called a three term controller
 - Good robustness properties across a wide frequency range
 - Simple

$$\frac{U(s)}{E(s)} = k_p + \frac{k_i}{s} + k_d s$$

PID

- Three adjustable gains

$$u(t) = k_p e(t) + k_i \int_0^t e(t) dt + k_d \frac{de(t)}{dt}$$

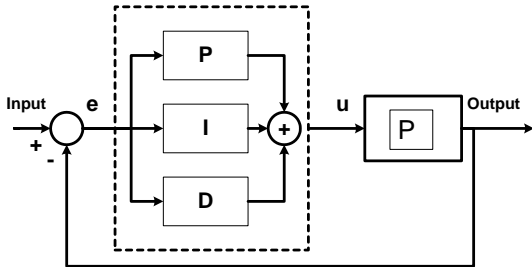


PID Control

Proportional -> Present

Integral -> Past

Derivative -> Future


Today... P
 Yesterday... I
 Tomorrow... D

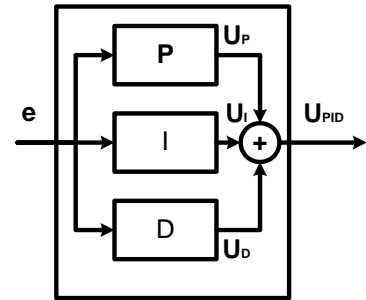

PID Control

Proportional


- Simple Gain
- $U_p = K_p * e$
- The larger the error, the larger the control effort
- **Decreases Rise Time**
- **Increases Overshoot**

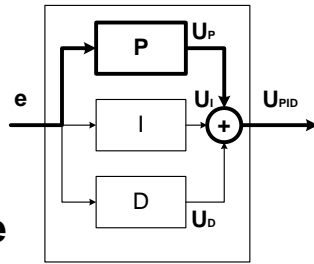

PID Control

Integral


- "Averager"
- $U_i = K_i * \sum e$
- Low Pass Filter (1/s)
- Decreases Rise Time
- Increases Overshoot
- Adds sensitivity to low frequency input
- **Eliminates Steady State error to Step Inputs**

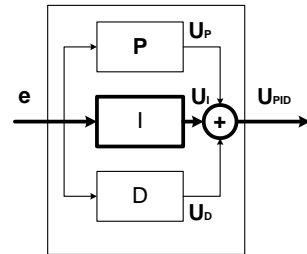

PID Control

Derivative

- Slope/Anticipator
- $U_d = K_d * de/dt$
- High Pass Filter (s)
- Increases Bandwidth
- **Decreases overshoot & settling time**
- Adds sensitivity to high frequency input components (and noise!)

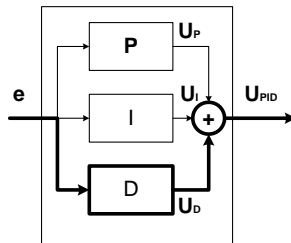

PID Control

Parameter effects summary

Parameter	Rise Time	Overshoot	Settling Time	S.S. Error
P	Decrease	Increase	Small Change	Decrease
I	Decrease	Increase	Increase	Eliminate
D	Small Change	Decrease	Decrease	Small Change

In short:

P to decrease rise time
I to eliminate Steady State error
D to decrease overshoot

Tuning a PID controller

Practical, Closed loop tuning

1. Set **I** and **D** to zero.
2. Increase **P** until output oscillates.
3. Increase **I** until oscillation stops.
4. Increase **D** until the loop is acceptably quick to reach its reference

Tuning a PID controller


- Ziegler-Nichols closed loop tuning
 - Disable K_d and K_i
 - Perform step tests while increasing K_p until a stable oscillation is achieved. (This value of K_p is called the ultimate gain K_u)
 - Measure the period of the resulting oscillation and call it P_u

K	k_p	k_i	k_d
PI	$0.45K_u$	$1.2K_p/P_u$	
PID	$0.6K_u$	$2K_p/P_u$	$K_p * P_u / 8$

Tuning a PID controller

• Ziegler-Nichols open loop tuning

- Approximate your open loop step response with a delayed single order system:

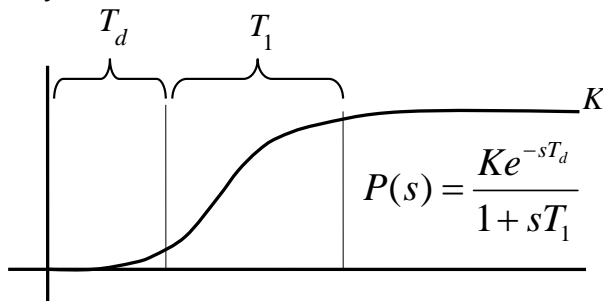

Tuning a PID controller

• Ziegler-Nichols open loop tuning

- Set your PID gains using this table and the measured values of T_1 , T_d , and K

K	k_p	k_i	k_d
P	T_1/KT_d		
PI	$0.9T_1/KT_d$	$3.3T_d$	
PID	$1.2T_1/KT_d$	$2T_d$	$0.5T_d$

Car Example




$$P(s) = \frac{1/m}{s + b/m}$$

• $K=k_p$, Our First Controller

$$m = 1 \quad b = 1$$

$$P = \frac{1}{s+1} \quad k_p = 1$$

$$T_{ry} = \frac{PK}{1+PK} = \frac{1}{s+2}$$

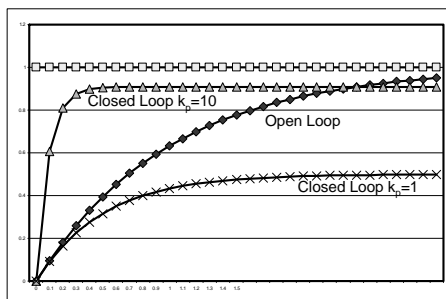

Car Example



$$P(s) = \frac{1/m}{s + b/m}$$


• PI control

• e_{ss} is gone

$$K = k_p + \frac{k_i}{s}$$

$$T_{ry} = \frac{k_p s + k_i}{s^2 + s(1+k_p) + k_i}$$


Step Response of the Plant with PI control

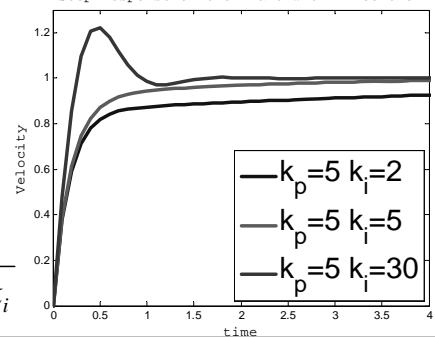

Car Simulation

• Car Simulation Lab

Motor Example

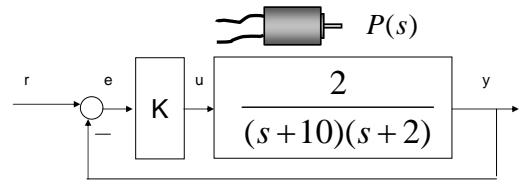


• $K=k_p$, Our First Controller

$$T_{ry} = \frac{PK}{1+PK}$$

$$T_{ry} = \frac{2k_p}{(s+10)(s+2)+2k_p}$$



Motor Example




$$k_p = 8 \quad T_{ry} = \frac{16}{(s+6)(s+6)}$$

$$k_p = 100 \quad T_{ry} = \frac{200}{(s+6+13.5j)(s+6-13.5j)}$$

Motor Example

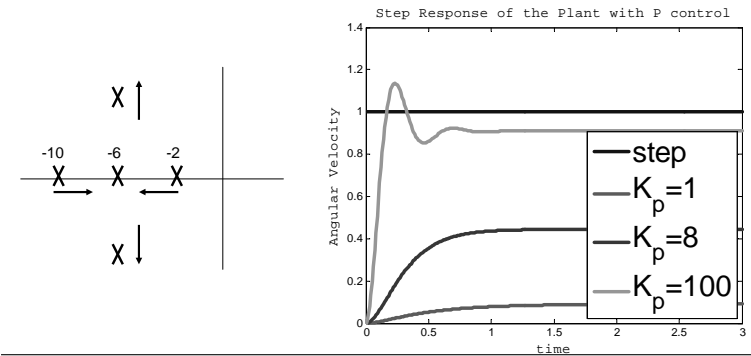


Motor Example




• PI control

$$K = k_p + \frac{k_i}{s}$$

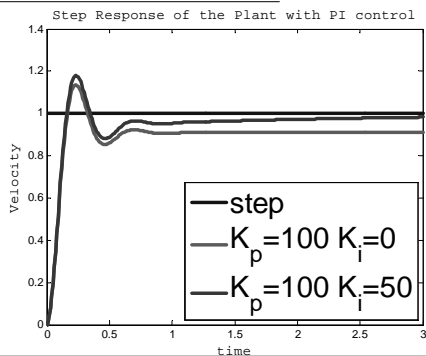


Motor Example



• PID control

$$K = k_p + \frac{k_i}{s} + k_d s$$

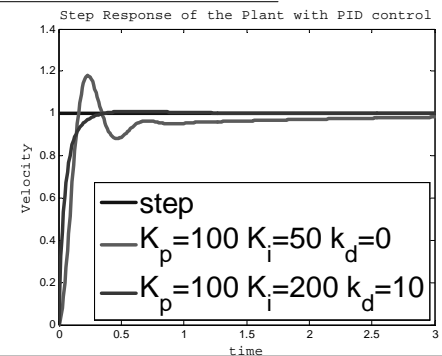


Motor Simulation

- Motor Simulation Lab

Feedback Control


- Feedback
 - The Standard Feedback Loop
 - Closed Loop

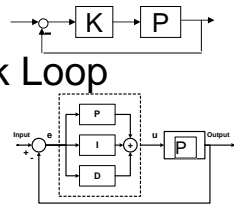

- PID
 - How does each term work?
 - Tuning a PID controller



- Car example
- Motor example




PID Implementation

PID Implementation



- The Discrete Feedback loop
- The Discrete PID controller
 - Positional version
 - Velocity
- PID Controller Realization
 - Coding flow chart
 - Choosing a sampling and loop update frequency
- PID LAB

The Discrete Feedback loop

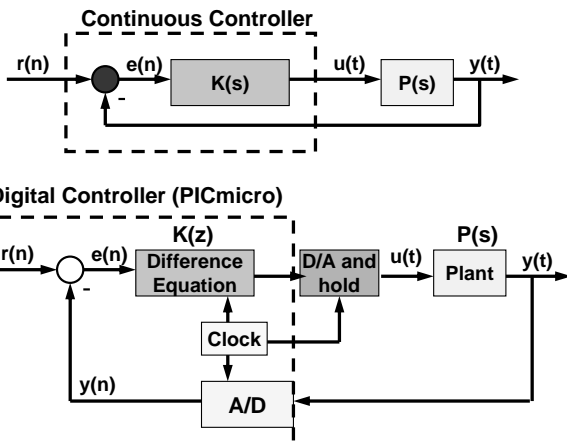

The Discrete Feedback loop

Digital Controller (PICmicro)

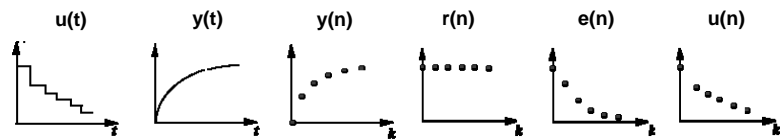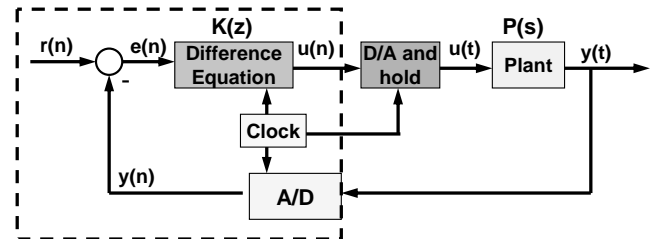

The Discrete PID controller

$$\frac{U(s)}{E(s)} = K_p + \frac{K_i}{s} + K_d s$$


$$u(t) = k_p e(t) + k_i \int_0^t e(t) dt + k_d \frac{de(t)}{dt}$$

- Trapezoidal approximation:

$$\int_0^t e(t) dt \approx \sum_{k=1}^n T e(kT)$$

- Backward difference approximation:

$$\frac{de(t)}{dt} \approx \frac{e(kT) - e(kT-T)}{T}$$

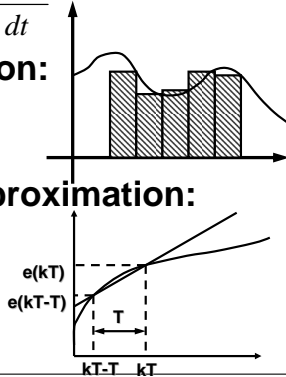

The Discrete PID controller

$$\frac{U(s)}{E(s)} = K_p + \frac{K_i}{s} + K_d s$$

- Positional PID controller

$$u(kT) = K_p e(kT) + K_d \frac{e(kT) - e(kT-T)}{T} + K_i T \sum_{k=1}^n e(kT) + u_0$$

The Discrete PID controller

$$\frac{U(s)}{E(s)} = K_p + \frac{K_i}{s} + K_d s$$


- Velocity PID controller

- Shift by one sample and subtract
- Previous control value is modified
- Smoother control action with small error

$$u(kT) = u(kT-T) + K_p [e(kT) - e(kT-T)] + K_i T e(kT) + \frac{K_d}{T} [e(kT) - 2e(kT-T) - e(kT-2T)]$$


PID Controller Realization

- PID controller as a parallel structure:

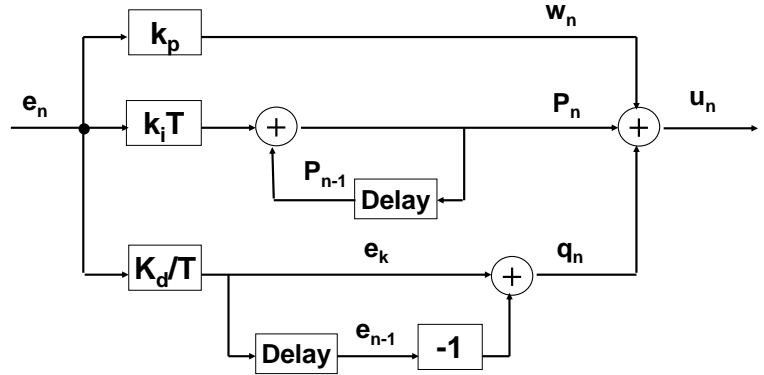

PID Controller Realization

- PID controller as a parallel structure:

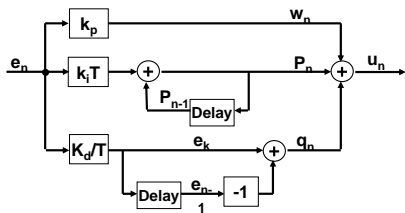

PID Update :

$$w_n = k_p e_n$$


$$p_n = k_i T e_n + p_{n-1}$$

$$q_n = \frac{k_d}{T} (e_n - e_{n-1})$$

$$u_n = w_n + p_n + q_n$$

Code Blocks

- Typical code flow chart:

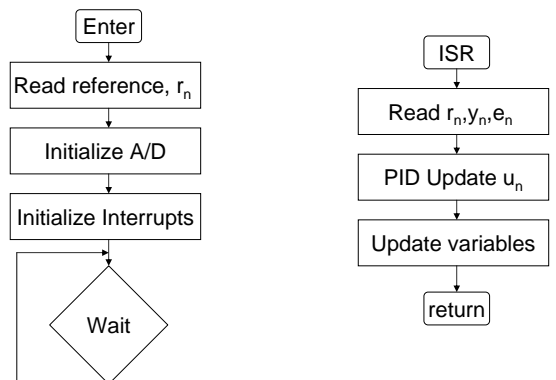


Choosing a sampling rate

- If plant dominant time constant is T_p :
 - $T < T_p/10$
- If Ziegler-Nichols open-loop model was used:


$$P(s) = \frac{Ke^{-sT_d}}{1 + sT_1}$$
 - $T < T_1/4$

Things to Watch Out For

- **Saturation and Integral Wind Up**



- **Noise and Quantization**


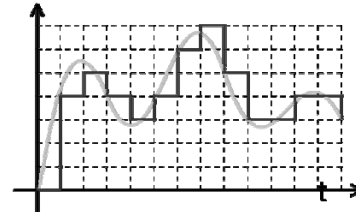


LAB

Summary

Introduction
Modeling
Feedback Control
PID Implementation

- **Introduction to Control Systems**
- **Modeling**
 - Examples
- **Feedback Control Systems**
 - Examples
- **PID Implementation**
 - LAB



References

- “Microcontroller Based Applied Digital Control”
 - by Dogan Ibrahim
- “Schaum's Outline of Feedback and Control Systems”
 - by Allen Stubberud
- “Applied Control Theory for Embedded Systems”
 - by Tim Wescott
- “Modern Control Design With MATLAB and SIMULINK”
 - by Ashish Tewari

References

- “Discrete-Time Control Systems”
 - by Katsuhiko Ogata
- “Control Tutorials for MATLAB and Simulink: A Web-Based Approach”
 - by William Messner
- AN964 “software PID Control of an Inverted Pendulum Using the PIC16F684”
- AN937 “Implementing a PID Controller Using a PIC18 MCU”
- “Control system” wikipedia.org